

ABS MOTOR RELAY

ON-VEHICLE INSPECTION


1. INSPECT VSC NO. 1 (FAIL SAFE) RELAY

- (a) Remove the VSC No. 1 (fail safe) relay.
- (b) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Condition	Specified Condition
3 - 5	Always	10 kΩ or higher
3 - 5	Apply B+ between terminals 1 and 2	Below 1 Ω

If the value is not as specified, replace the VSC No. 1 (fail safe) relay.

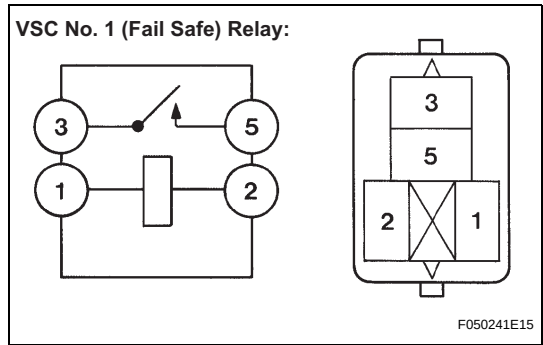

2. INSPECT VSC NO. 2 RELAY

- (a) Remove the VSC No. 2 relay.
- (b) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Condition	Specified Condition
3 - 5	Always	10 kΩ or higher
3 - 5	Apply B+ between terminals 1 and 2	Below 1 Ω

If the value is not as specified, replace the VSC No. 2 relay.

